

## Troubleshooting Printer Problems.

1. Check all connections.
2. Check wireless connections, if applicable.
3. Create a Restore Point.
4. Locate Printer: Start -> Control Panel -> Printers.
5. Verify if Printer is Default.
6. If not, choose Printer to be Default and test again.
7. If Printer still doesn't work, Delete Printer.
- 8.. Unplug, reconnect, and turn on Printer.
9. Let Printer reinstall itself. (This works best with the original CD.)
10. Test Printer again.